 
 


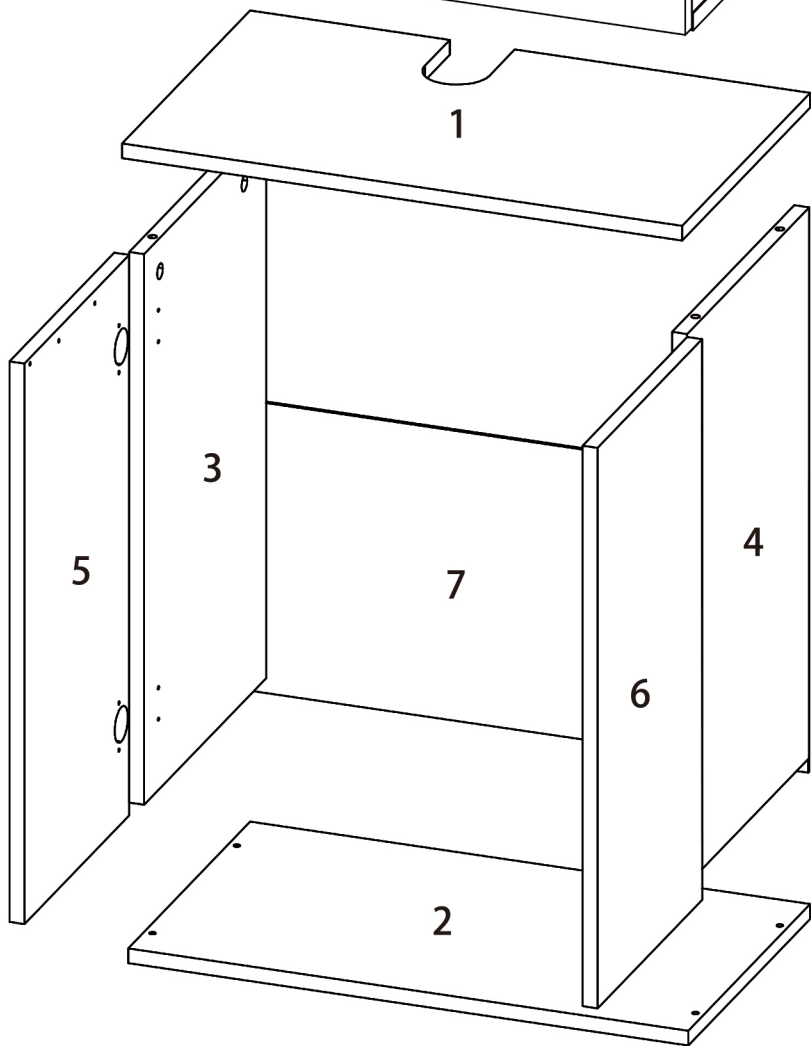

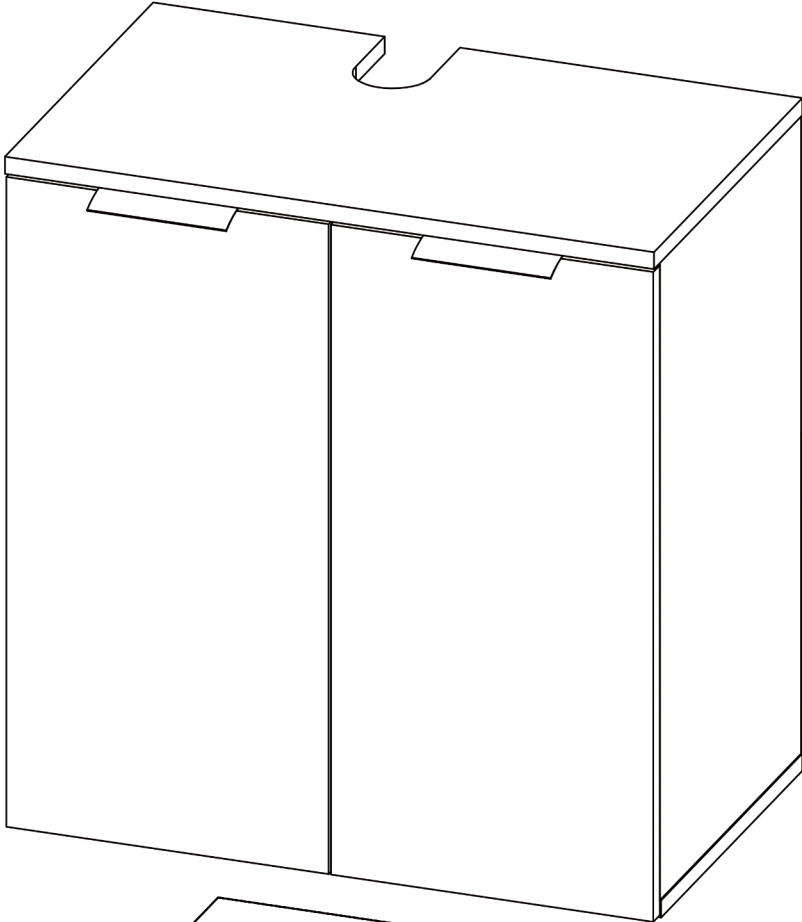




 



 
 
 



 
# Assembly Instruction




## Accessories list

	Parts	Specification	Carton	Pcs		Parts	Specification	Carton	Pcs
<b>A</b>		6×40mm	1/1	X 4	<b>B</b>		15×12	1/1	X 4
<b>C</b>		Hinge	1/1	X 4	<b>D</b>		3×14	1/1	X 4
<b>E</b>		3.5×14mm	1/1	X 32	<b>F</b>		5×40/#3	1/1	X 4/1
<b>G</b>		10×40	1/1	X 4	<b>H</b>		Door stopper	1/1	X 1
<b>I</b>		96mm	1/1	X 2	<b>J</b>		Nails	1/1	X 12
<b>L</b>		21mm	1/1	X 4					

Company: (mm)


<b>1</b>		X1	560x340	1/1	<b>2</b>		X1	560x340	1/1
<b>3</b>		X1	560x324	1/1	<b>4</b>		X1	560x324	1/1
<b>5</b>		X1	570x280	1/1	<b>6</b>		X1	570x280	1/1
<b>7</b>		X1	558x295	1/1					

 1

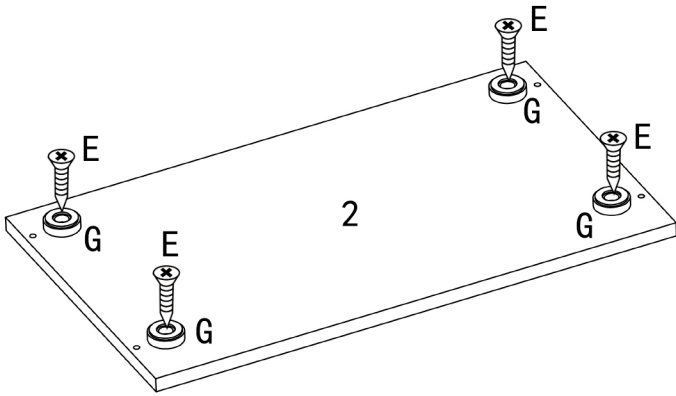


Gx4 Ex4

 2




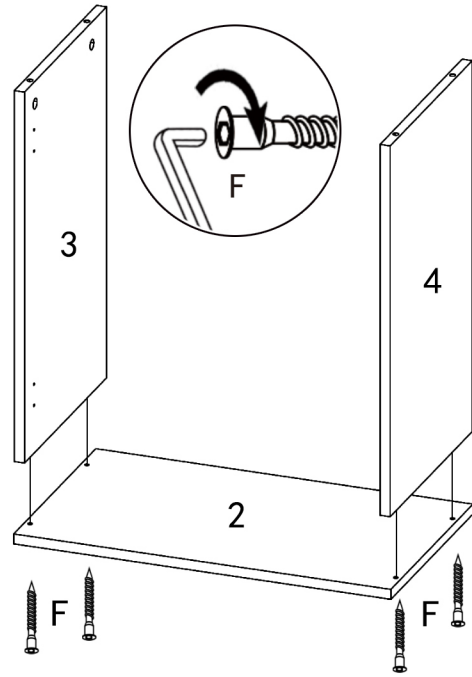


Fx4

 
3

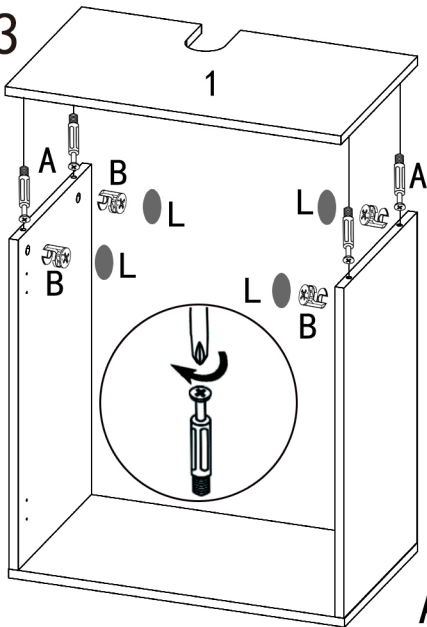

Ax4 Bx4 Lx4

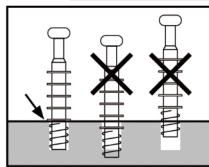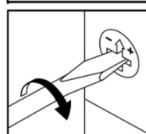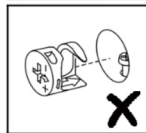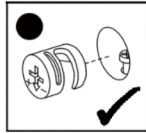    

4

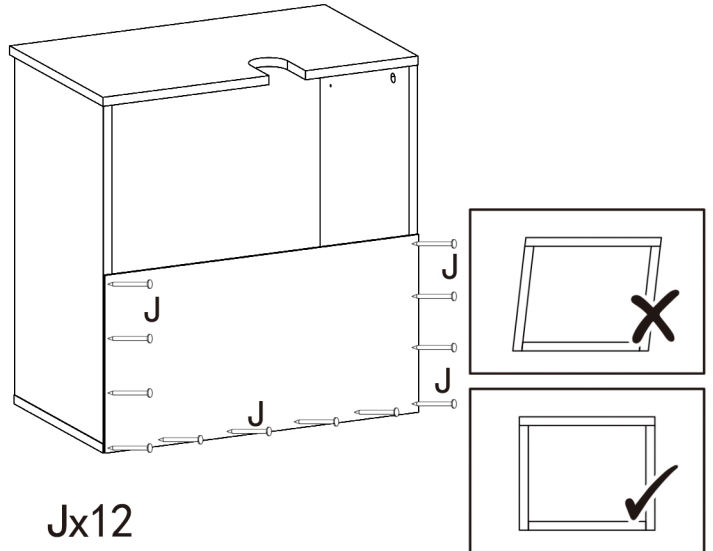 


Jx12

5

**Hinge adjustment**

 To facilitate the adjustment, install the E1 screw first, and then install the E2 screw.


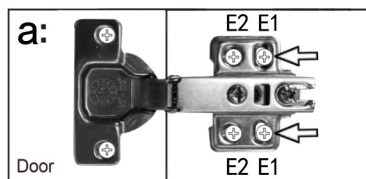


6

**Hinge adjustment**

  a: To move doors up or down: loosen screws shown and move doors to suit.

Once doors are aligned, re-tighten Screws C

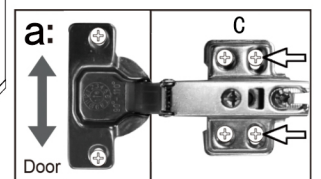
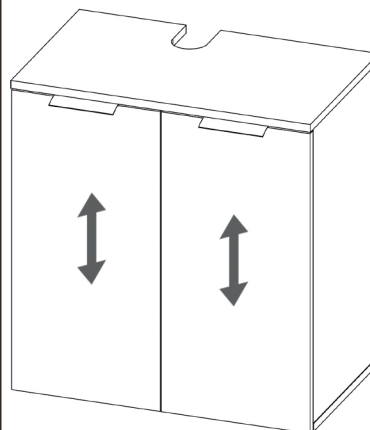


7

Hinge adjustment

b: To move doors in or out: loosen screw shown and move doors to suit.

  Re-tighten screws

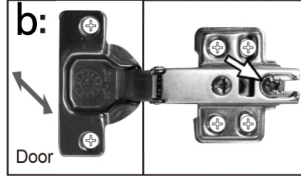
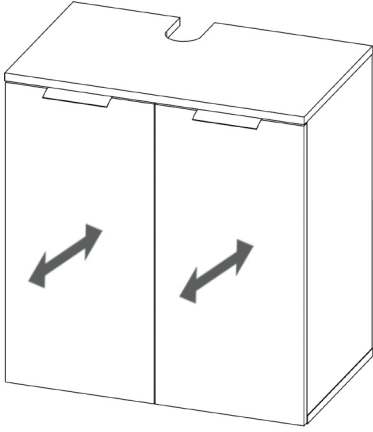


8



Hinge adjustment

c: To move doors left or right: loosen screw shown and move doors to suit.

  Re-tighten screws

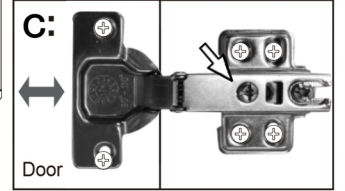
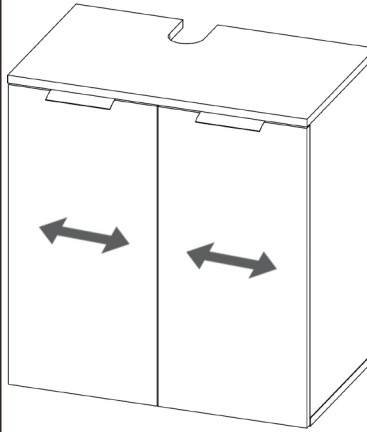


9

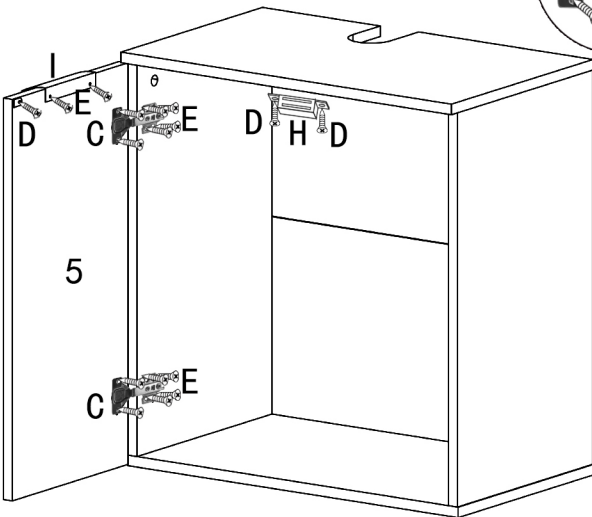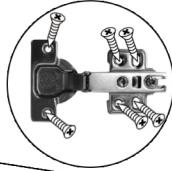  

- Cx2
- Dx3
- Ex14
- Hx1
- Ix1

  10

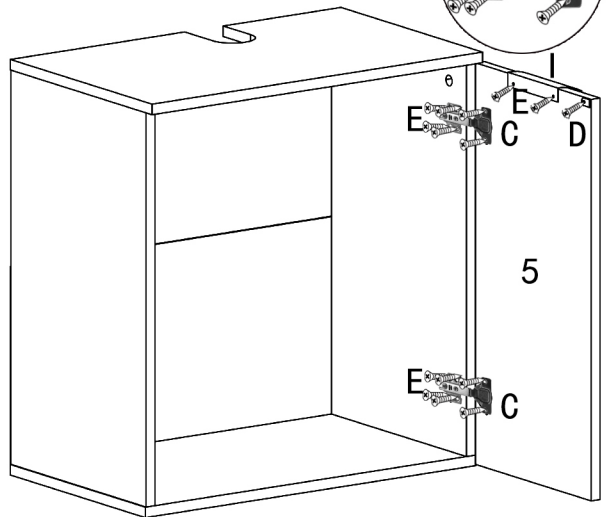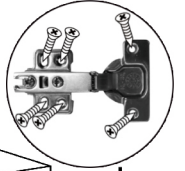

- Cx2
- Dx1
- Ex14
- Ix1

11

